

PRESSACAVO METRICO

Tabella E				
Inserto	Pressacavo METRICO	Cod.	Campo serraggio (mm)	
			Min	Max
16S-1, 16-10	M20	P3	9	14
20-15	M16	P1	4	10
	M20	P3	9	14
	M25	P4	13	18
22-1, 22-2, 22-22	M25	P4	13	18
	M32	P5	14	25
24-2, 24-11	M20	P3	9	14
	M25	P4	13	18
	M32	P5	14	25
28A-9, 28-22, 28-3 28-6, 28-10	M25	P4	13	18
	M32	P5	14	25
32A-9, 32-5	M25	P4	13	18
	M32	P5	14	25
40A-10	M32	P5	14	25
	M40	P6	24	32

